



## TUBE MOUNT WELD-ON JACK

### OWNER'S MANUAL



**Top-Wind**

**Side-Wind**



#### **WARNING:**

Read carefully and understand all **ASSEMBLY AND OPERATION INSTRUCTIONS** before operating. Failure to follow the safety rules and other basic safety precautions may result in serious personal injury.

**Item#s 44071, 44072, 44073, 44074, 44075, 44076**

Thank you very much for choosing an Ultra-Tow product! For future reference, please complete the owner's record below:

Model: \_\_\_\_\_ Purchase Date: \_\_\_\_\_

Save the receipt, warranty and these instructions. It is important that you read the entire manual to become familiar with this product before you begin using it.

This jack is designed for certain applications only. The distributor cannot be responsible for issues arising from modification. We strongly recommend this jack not be modified and/or used for any application other than that for which it was designed. If you have any questions relative to a particular application, DO NOT use the jack until you have first contacted the distributor to determine if it can or should be performed on the product.

For technical questions please call **1-800-222-5381**.

## INTENDED USE

This top-quality Ultra-Tow™ trailer jack has a weld-on style mount that includes a male mating pipe/tube and a pin and lanyard assembly. The round tube jacks have a corrosion-resistant exterior-grade black powder-coat finish on the outside, with a zinc finish on the inner tube and foot. The square tube jacks have a durable exterior-grade black paint finish on the outside tube with zinc finish on the inner tube. The topwind models (Item#s 44071, 44072, 44073 and 44075) have a red claw knob on a clear zinc solid bar handle that folds away when not in use. The sidewind models (Item#s 44074 and 44076) have a large, comfortable grooved handle that makes cranking almost effortless. A grease zerk fitting is built in for easy greasing of the jack, and a welded-on foot adds stability.

Item#	Crank Type	Clearance	Range	Lift Capacity
44071	Top-Wind	4in.	11.25in.–21.25in.	2000 lbs.
44072	Top-Wind	5.25in.	15in.–30in.	3000 lbs.
44073	Top-Wind	8in.	15.25in.–30.25in.	3000 lbs.
44074	Side-Wind	9in.	15.25in.–30.25in.	3000 lbs.
44075	Top-Wind	8in.	15.25in.–30.25in.	5000 lbs.
44076	Side-Wind	9in.	15.25in.–30.25in.	5000 lbs.

## GENERAL SAFETY RULES



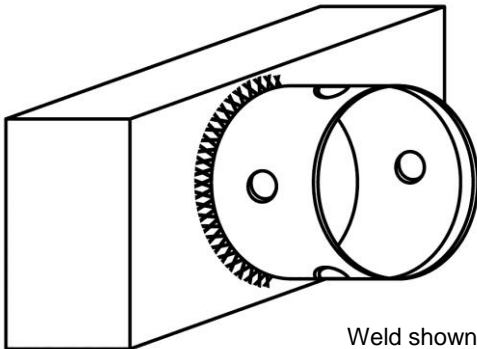
### WARNING

- Read and understand all instructions. Failure to follow all instructions listed below may result in serious injury.
- Owner must ensure that the jack is installed according to these instructions
- Never position any part of body under this product or supported load.
- Fully retract/rotate jack before towing.
- This jack is not intended for use as a transport device. Minimize movement of the implement while the jack is under load.
- Do not allow children to play on or around this jack while supporting a load.
- Secure the load, vehicle and trailer from rolling when operating jack.
- Never attempt to lift or support loads in excess of the rated strength of this trailer jack.

- This jack is designed for vertical loading. Excessive side forces may cause failure and or injury.
- Before moving trailer crank jack to its lowest position.
- These jacks are not designed for round tongues.
- Do not modify the jack in any way. Unauthorized modification may impair the function and/or safety and could affect the life of the equipment. There are specific applications for which the jack was designed.
- The swivel is very strong. However abuse, corrosion or damage may cause swivel to break. Regularly inspect the swivel for damage and discontinue use if the swivel is damaged.
- Store idle jack. When jack is not in use, store it in a secure place out of the reach of children. Inspect it for good working condition prior to storage and before re-use.

## SAVE THESE INSTRUCTIONS

### ASSEMBLY

 <p style="text-align: center;">Weld shown</p>	<ol style="list-style-type: none"> <li>1. When mounting trailer jack it is best to hook up to the tow vehicle to make sure trailer is secure.</li> <li>2. Mount jack based on drawing at left. All welding must be performed by a certified welder.</li> <li>3. Place male tube mount so one of the four pin holes are facing up and perpendicular to the trailer frame.</li> <li>4. Weld on entire surface where male tube meets trailer frame with 3/16" fillet weld.</li> <li>5. After jack is mounted to trailer, attach the handle assembly to jack with bolt fastener provided.</li> </ol>
--	--

### OPERATION

1. To activate the swivel function on the jack pull the pin and swivel jack into desired position.
2. Only swivel jack when trailer is securely attached to a tow vehicle. Make sure pull pin is properly engaged after swiveling into desired position.
3. Make sure swivel pull pin is properly engaged after swiveling into desired position.

### MAINTENANCE

- **Maintain your Jack.** It is recommended that the general condition of any jack be examined before it is used. Keep your jack in good repair by adopting a program of conscientious repair and maintenance. If jack is damaged, discontinue use of the jack.
- This jack is pre-greased for easy operation. This jack however includes a grease zerk for easy lubrication as needed.

## **WARRANTY**

**3-year limited warranty**

***ULTRA-TOW***<sup>™</sup>

Distributed by  
Northern Tool + Equipment Co., Inc.  
Burnsville, Minnesota 55306  
NorthernTool.com  
Made in China