

Fore & Aft Isolator

Flip the lever to enable or lock the isolator.



Pump Switch

Push switch to activate pump. Pull to release air.
Note: Weight must be applied to the suspension to activate the pump.