



# Deluxe Air Suspension


**Top View**

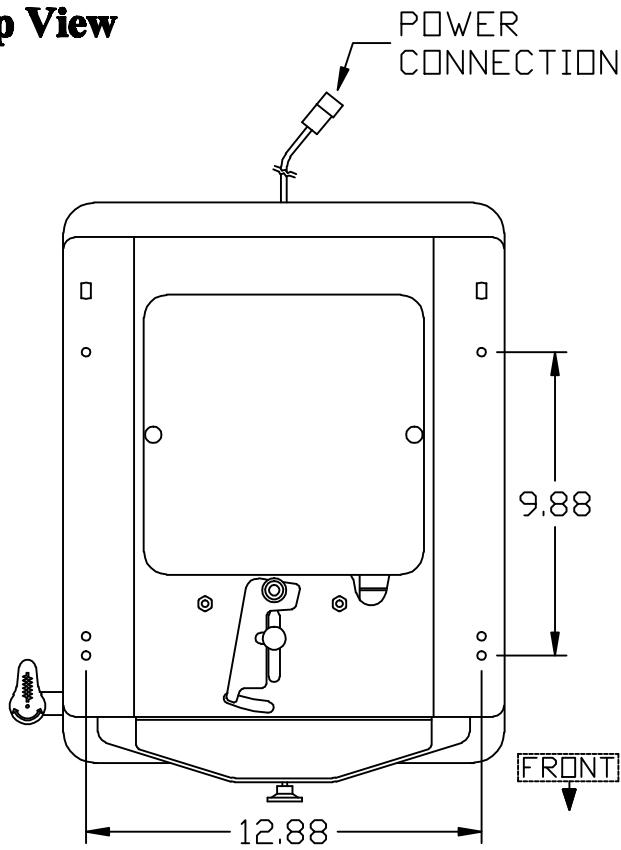


**Bottom View**

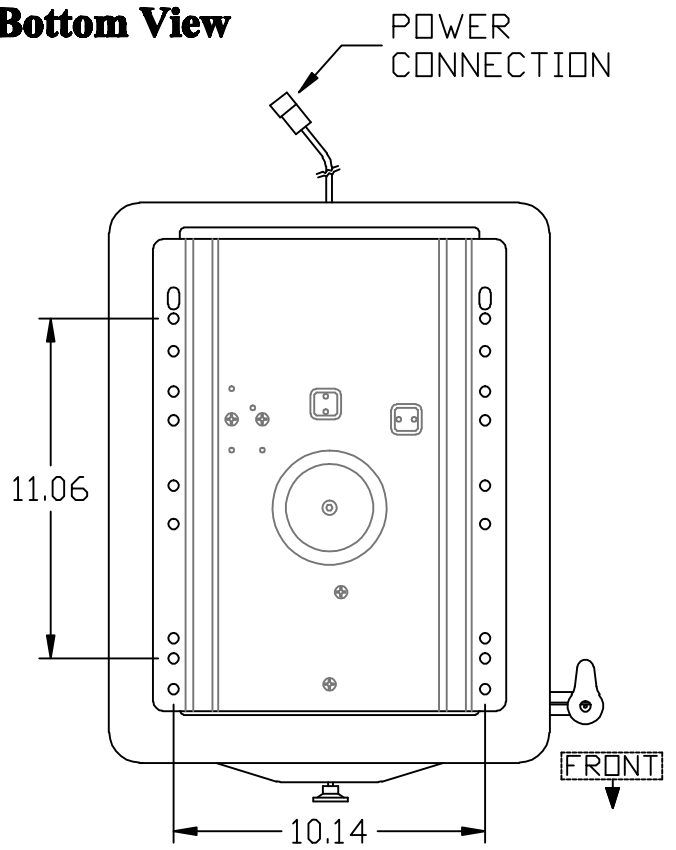

**Front View**

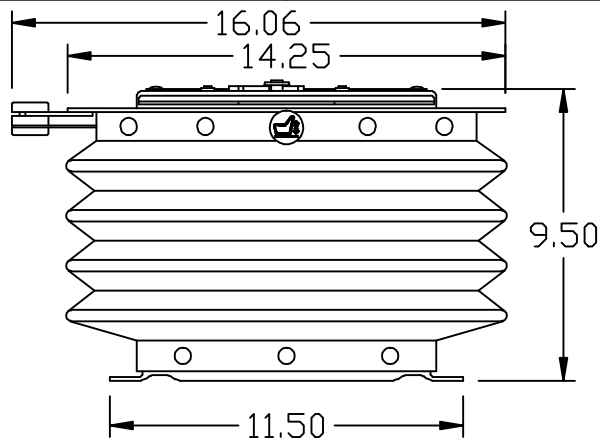

**Side View**

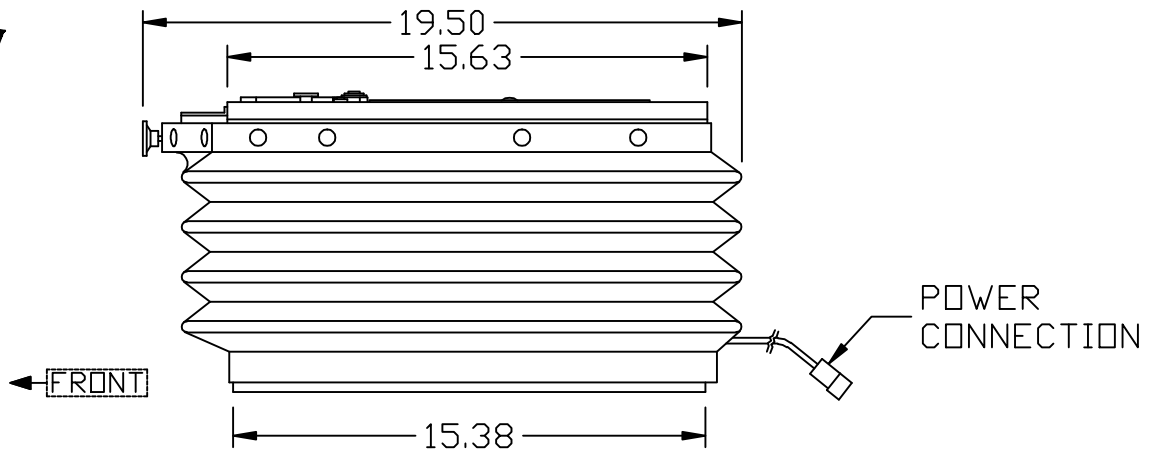

# Operation Guide

## Deluxe Air Suspension

**Fore & Aft Isolator**  
Flip the lever to enable or lock the isolator.



**Pump Switch**  
Push switch to activate pump. Pull to release air.  
*Note: Weight must be applied to the suspension to activate the pump.*

**Weight Sensor**  
Flip switch to enable or disable automatic weight / pressure sensor.