


## **Installation Guide**

## **Kubota Series Mirror PN: 2766**

- 1. Attach mounting bracket to cab with a 5/8 -11 x 4 bolt nut and lock washer and a 5/16-18 x 1 bolt, nut and lock washer .
- 2. Fasten the mirror arm assembly to the mounting bracket with two 5/16-18 x 1 full thread bolts, lat washers, lock washers and nuts.
- 3. Insert the small tube into the mirror arm assembly and secure with the plastic mirror knob.
- 4. Fasten the mirror head to the small pipe with the 2" clamp and included hardware.

NOTE: Mirror can be mounted on either the right or left side.

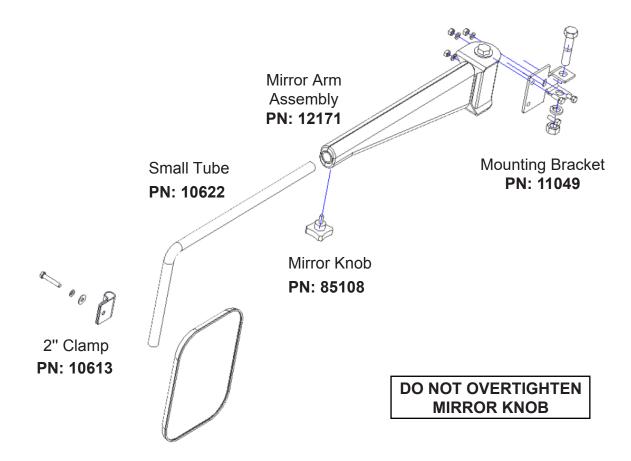

Phone: 1.800.328.1752 / Website: www.tractorseats.com