


# Installation Guide

## JD 30 Series Monitor Bracket (PN: 3173)

*Fits:*  
*John Deere 7020, 7030, 8030, 8030T,  
9000T, 9020 and 9030 4WD Series*

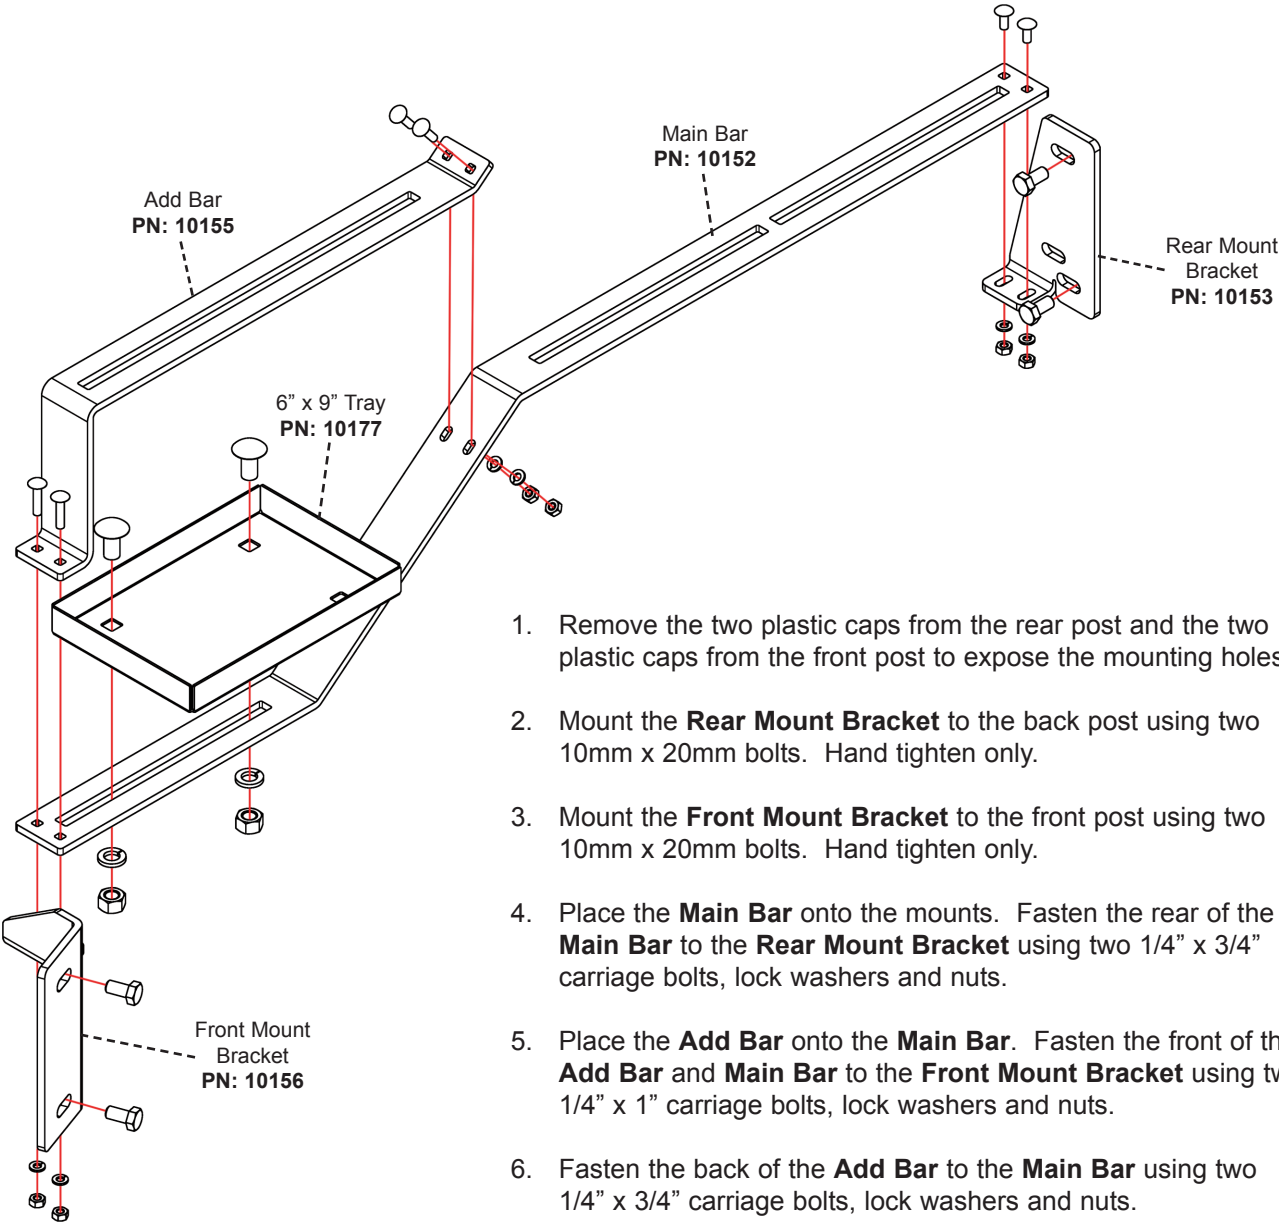

1. Remove the two plastic caps from the rear post and the two plastic caps from the front post to expose the mounting holes.
2. Mount the **Rear Mount Bracket** to the back post using two 10mm x 20mm bolts. Hand tighten only.
3. Mount the **Front Mount Bracket** to the front post using two 10mm x 20mm bolts. Hand tighten only.
4. Place the **Main Bar** onto the mounts. Fasten the rear of the **Main Bar** to the **Rear Mount Bracket** using two 1/4" x 3/4" carriage bolts, lock washers and nuts.
5. Place the **Add Bar** onto the **Main Bar**. Fasten the front of the **Add Bar** and **Main Bar** to the **Front Mount Bracket** using two 1/4" x 1" carriage bolts, lock washers and nuts.
6. Fasten the back of the **Add Bar** to the **Main Bar** using two 1/4" x 3/4" carriage bolts, lock washers and nuts.
7. Mount the **Tray** to the **Main Bar** at desired location using two 1/2" x 1" carriage bolts, lock washers and nuts.
8. Tighten all hardware.