


## Installation Guide

### JD Sound-Gard™ Monitor Bracket (PN: 3189)


FITS JOHN DEERE® TRACTORS WITH SOUND-GARD™ CAB

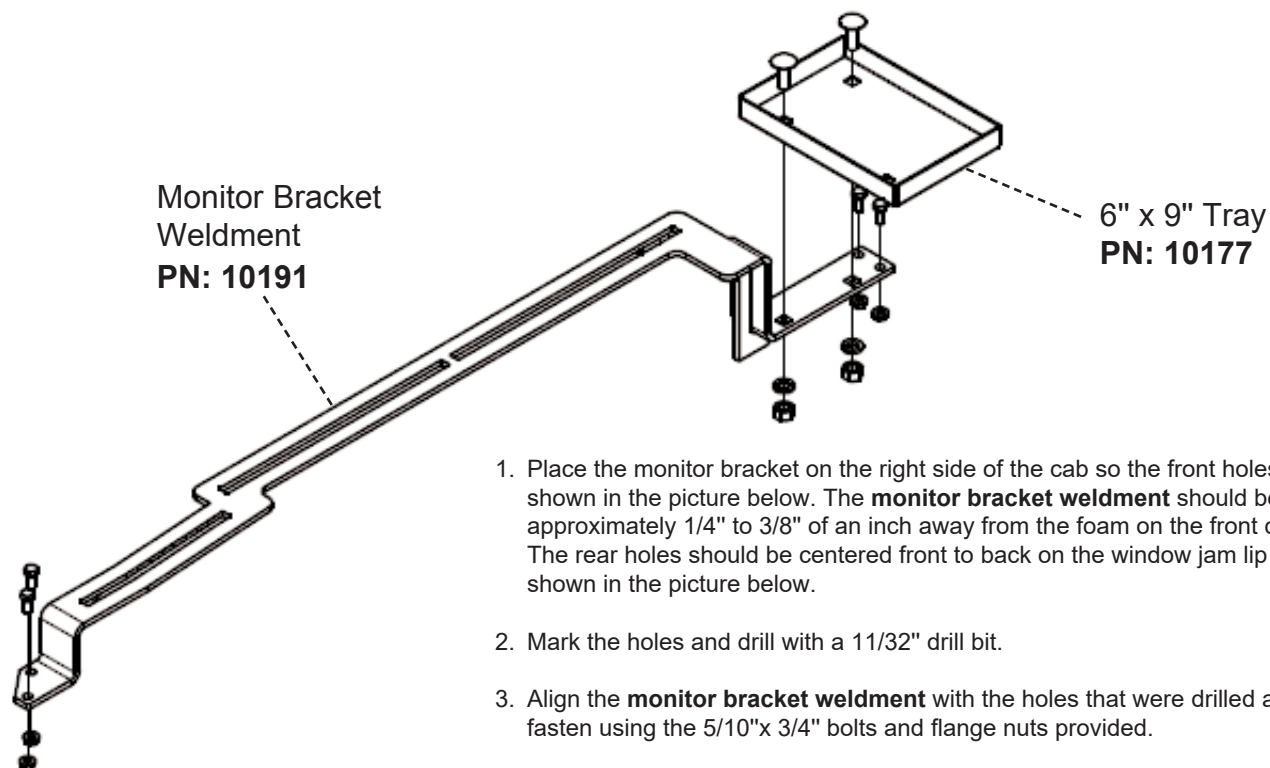

1. Place the monitor bracket on the right side of the cab so the front holes rest as shown in the picture below. The **monitor bracket weldment** should be approximately 1/4" to 3/8" of an inch away from the foam on the front cab post. The rear holes should be centered front to back on the window jam lip as shown in the picture below.
2. Mark the holes and drill with a 1 1/32" drill bit.
3. Align the **monitor bracket weldment** with the holes that were drilled and fasten using the 5/10"x 3/4" bolts and flange nuts provided.
4. Place the 6" x 9" tray where desired and fasten using the 1/2" x 1 1/4" carriage bolts, lock washers, and nuts provided. The tray can be mounted in back two holes or anywhere along the bar.
5. Tighten all hardware.



Front mounting of monitor bracket.

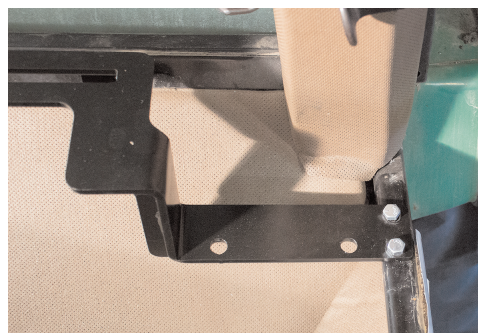

Rear mounting of monitor bracket.