


Instruction Guide 6557

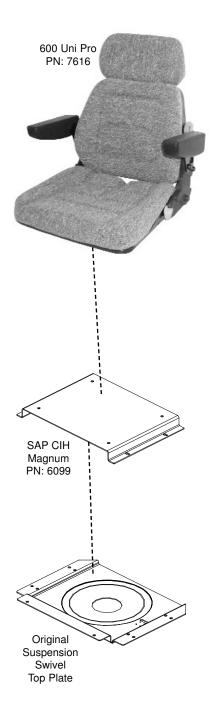

Installation Instructions to Place a 600 Uni Pro Seat Assembly in 71, 72 and 89 Series Magnum or 91, 92 and 93 Series 4WD Tractors with an Original Air Suspension with Swivel

- 1. Remove the original seat from the original swivel.
- 2. Bolt the seat assembly to the SAP CIH Magnum using four 5/16" x 1" bolts and flange nuts.
- Bolt the SAP CIH Magnum and the seat assembly to the top plate of the original swivel. Use four 5/16" x 1" bolts and flange nuts.