


1. Clean the floor around the steering column.
2. Pull back the floor mat around the steering column to expose the front two nuts or bolts securing it.
3. Remove the two front nuts or bolts. Keep the hardware to reuse later.



4. If there is a significant difference in height between the front of the steering column and the floor, the optional spacer plate will need to be installed.
5. Use the two 1/4-20 x 5/8" hex bolts to fasten the spacer plate to the bottom of the footrest.
6. Install the two plastic end caps into the ends of the footrest tube.
7. Install the pieces of anti-slip tape at each end of the footrest tube.

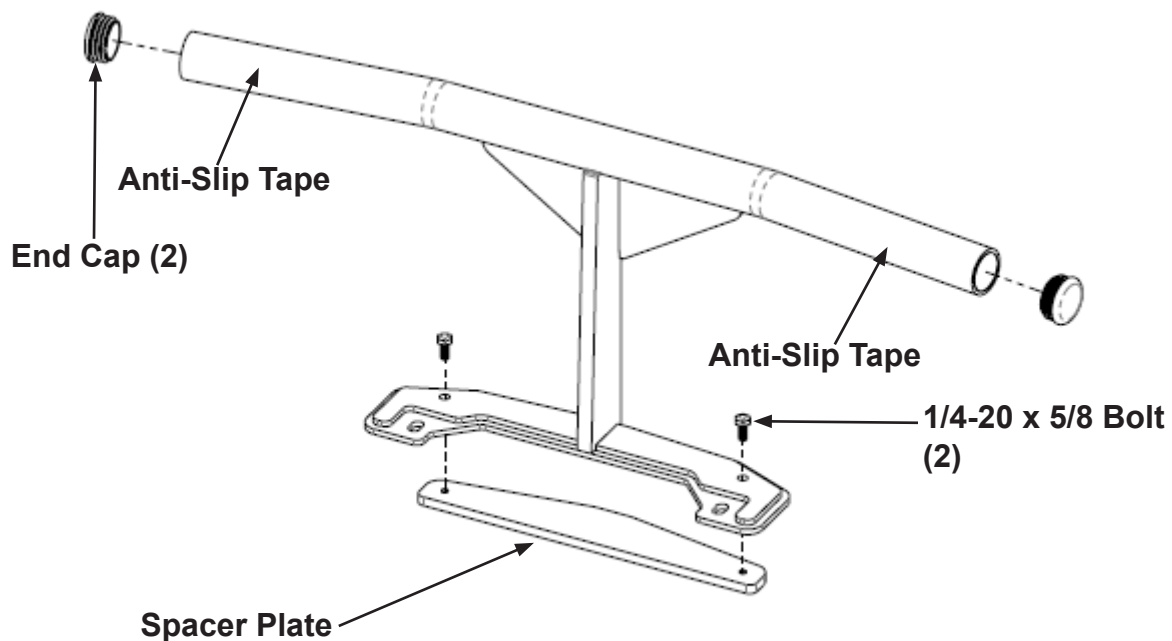

8. Install the footrest in front of the steering column. Use the previously removed hardware to fasten in place.
9. Fold the floor mat back into its original position. If desired, some of the floor mat can be trimmed to allow the floor mat to rest flat.

