


1. Clean the floor around the steering column.
2. Mark the center point of the floor mat in front of the steering column.
3. Cut through the floor mat on the mark in front of the steering column.
4. Pull back the floor mat so the front two bolts securing the steering column are exposed.
5. Remove the two nuts securing the front of the steering column.



6. Install the two plastic end caps into the ends of the footrest tube.
7. Install the pieces of anti-slip tape at each end of the footrest tube.

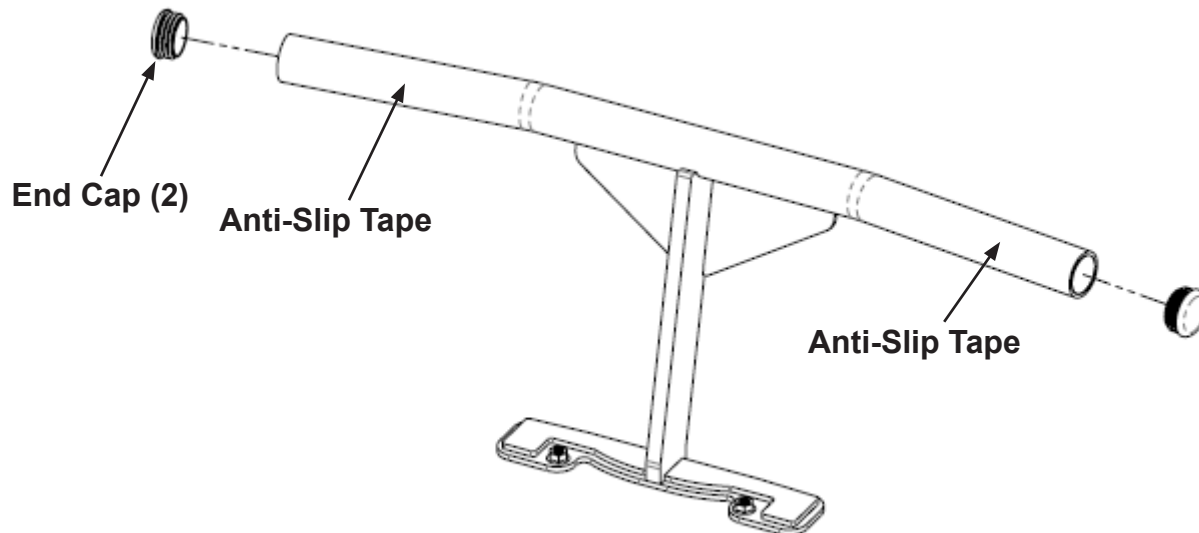

8. Install the footrest in front of the steering column. Use the included 8mm serrated flange nuts to fasten in place.
9. Fold the floor mat back into its original position. If desired, some of the floor mat can be trimmed to allow the floor mat to rest flat.

