


## Installation Guide

### Kubota KM 136 Seat Kit (PNs: 6855, 6856, & 6857)

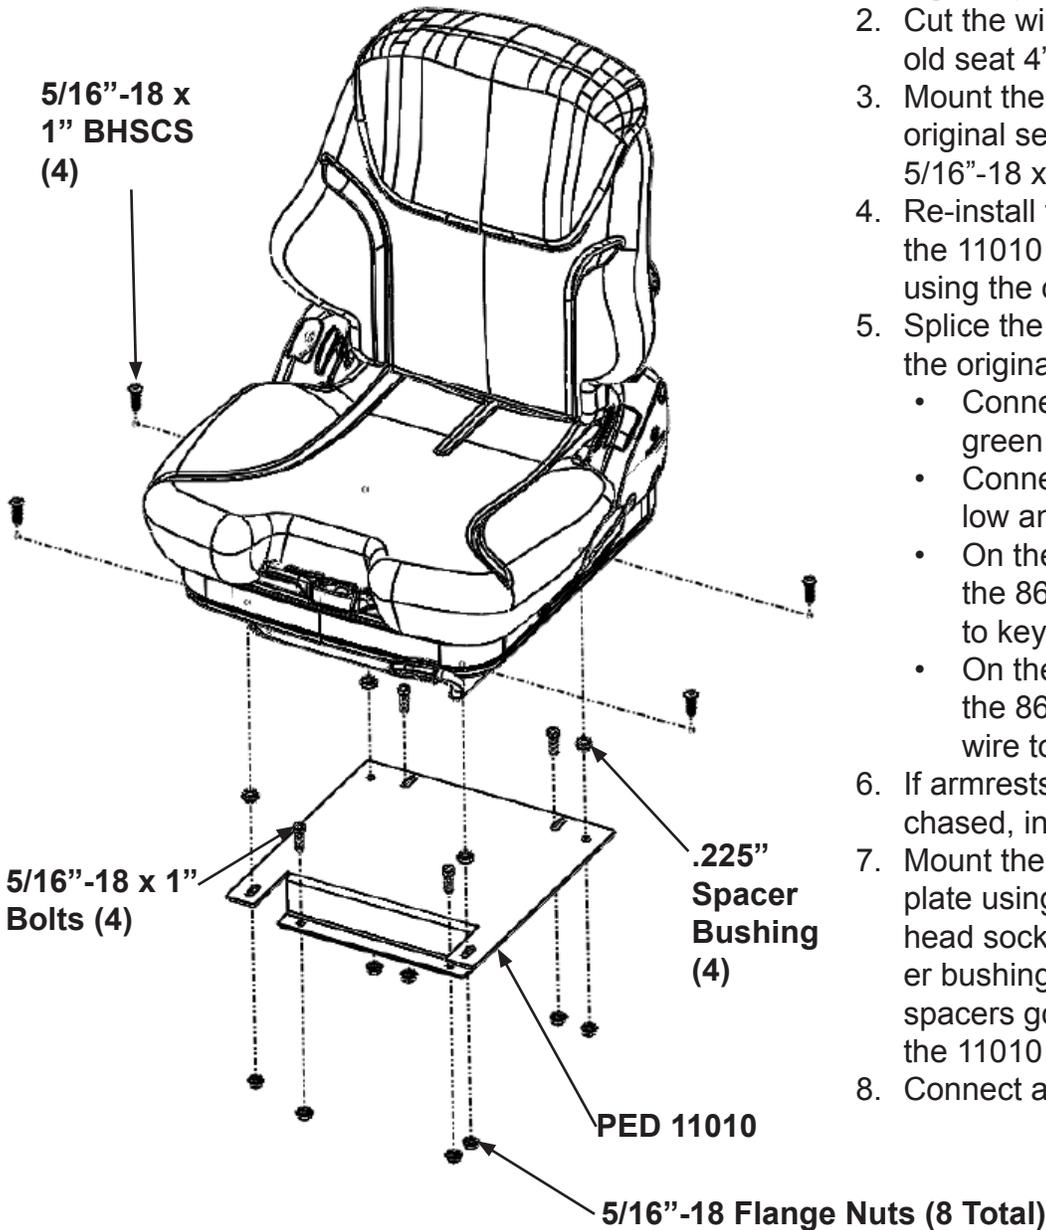

1. Remove old seat and suspension from tractor. To do so, remove the seat base plate by removing the four flange bolts and two flange nuts holding it in place.
2. Cut the wiring connectors off of the old seat 4" from the connection plug.
3. Mount the 11010 PED plate to the original seat base plate using four 5/16"-18 x 1" bolts and flange nuts.
4. Re-install the original seat base with the 11010 PED plate mounted to it using the original hardware.
5. Splice the 86419 wiring harness to the original tractor wiring.
  - Connect the white plug to the green and white wires on 86419.
  - Connect the gray plug to the yellow and white wires on 86419.
  - On the air seat only, add wire to the 86419 and route the red wire to keyed power.
  - On the air seat only, add wire to the 86419 and route the black wire to a tractor ground source.
6. If armrests or a seat belt kit were purchased, install at this time.
7. Mount the seat to the 11010 PED plate using four 5/16"-18 x 1" button head socket cap screws, .225" spacer bushings, and flange nuts. The spacers go in between the seat and the 11010 PED plate.
8. Connect all wiring plugs.