

Installation Guide 6887


Instructional Seat installation for John Deere 9000, Eff. sn 040210 9020, 9030 Series Wheel Tractors

Additional installation information for 6119 adapter plate

NOTE: Instructional Seat cannot be used with Field Office it will need to be removed from tractor to install the 6887 Instructional Seat. Disconnect the battery cable and remove the electrical outlet by the field office if equipped.

- 1. Read installation guide information included in Instructional Seat Kit 6887.
- Adjust seat all the way back and pull the floor mat back from behind LH upholstery panel. Remove the five screws attatching the panel to the cab. Keep screws for reuse. Remove storage drawer and rear tray. Remove LH upholstery panel to expose support.
- Note: Use caution removing upholstery from under rear molding to avoid damage to pan
- Install adapter bracket 6119 by lining up 3 holes shown in picture 1 to holes marked in picture 2 to fender support bracket. Attach bracket using 3 self-tapping M6 x 20 self-tapping screws provided in bolt kit. (Caution torq. 44 ft-lb.)

PICTURE 1

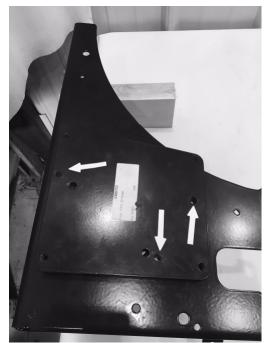

PICTURE 2



Technical Support

Phone: 1.800.328.1752 / Website: www.tractorseats.com

Installing Fender Panel:

- 1. If reusing cup holder style fender panel follow instructions provided in 6887. If replacing LH fender panel install now.
 - A. Reinstall upholstery panel and front trim molding with screws removed in step 2.
 - NOTE: Make sure lower upholstery panel is inside floor retainer.
 - B. Install RH seat belt Latch at a 1:00 o'clock position using M12 x 25 mm cap screw and 2.5mm flat washer.
 - C. Install LH seat belt Strap in position shown with M12 X 25 mm cap screw and 2.5 mm flat washer.

Installing Instructional Seat

- 1. Remove the lower seat cushion from seat assembly by removing front two M8 x20 mm screws and washers (save to reuse). Slide seat forward and lift to remove.
- 2. Remove steel tab of seat bottom shown with dotted line in picture 3 to allow clearance in position .
- 3. Install seat bracket to adapter plate with four M6 x 12 mm bolts.
- 4. Reinstall lower cushion by inserting rear screw into bracket slot. Push to rear and reinstall two M8 x 20 mm bolts and washers removed in previously.

Check all bolts and panels to make sure they fit correctly. Reconnect battery to complete installation.



PICTURE 3