


## Installation Guide

**John Deere 6000-7030 Series w/out IVT KM 1061 Kit Installation (PN: 6899)**

KM 1061 Uni Pro  
Seat and Suspension  
PN: 8436



1. Remove the original seat and suspension from the tractor.
2. Install the 6154 PED to the cab floor using four 8 mm x 25 mm flat head socket cap screws and .225" spacers. The spacers go in between the 6154 PED and the cab floor.
3. Place the seat onto the studs of the 6154 PED and fasten in place using four 5/16" serrated flange nuts.
4. Connect the wiring. The OPS plug goes to the purple and orange wires. The suspension power plug goes to the orange and black wires.

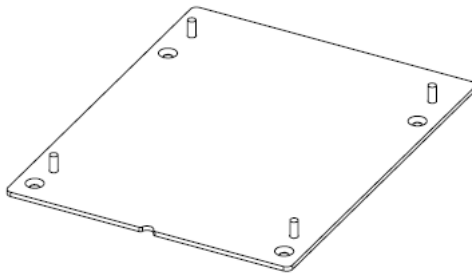

PN: 6154 PED