


## **Installation Guide 6981**

## Installation Instructions for KM 1057 Uni Pro Seat & Suspension in Massey Ferguson Tractors with an Angled Bostrom Mount

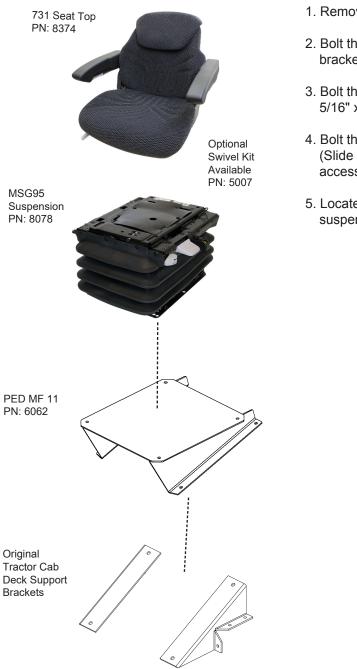

- 1. Remove the original seat and suspension from the tractor.
- 2. Bolt the Pedestal PN: 6062 to the tractor cab deck support brackets with four 5/16" x 1" bolts and flange nuts.
- 3. Bolt the suspension assembly to the pedestal PN: 6062 with four 5/16" x 3/4" bolts and flange nuts.
- Bolt the seat and slide rail assembly to the suspension assembly. (Slide seat forward to access rear two holes and all the way back to access front two holes.)
- 5. Locate the power cable coming from the lower part of the suspension and connect to 12v power source from tractor.

**Technical Support**