


## Installation Guide

### John Deere 6000/7000 Series Mirror (PN: 3138)

*Fits:*  
JD 6000, 6010, 7000 & 7010 Series

**NOTE:** Mirror can be used on either the right or left side.

1. Remove the two bolts from the upper part of the handrail (left side) or the muffler bracket (right side) and install the mirror mounting bracket using the original bolts.
2. Fasten the **mirror arm assembly** to the **mounting bracket** with two 5/16" x 1" full thread bolts, flat washers, lock washers and nuts.
3. Insert the **small tube** into the **mirror arm assembly** and secure with the **plastic mirror knob**.
4. Fasten the **mirror head** to the **small pipe** with the **2" clamp** and included hardware.

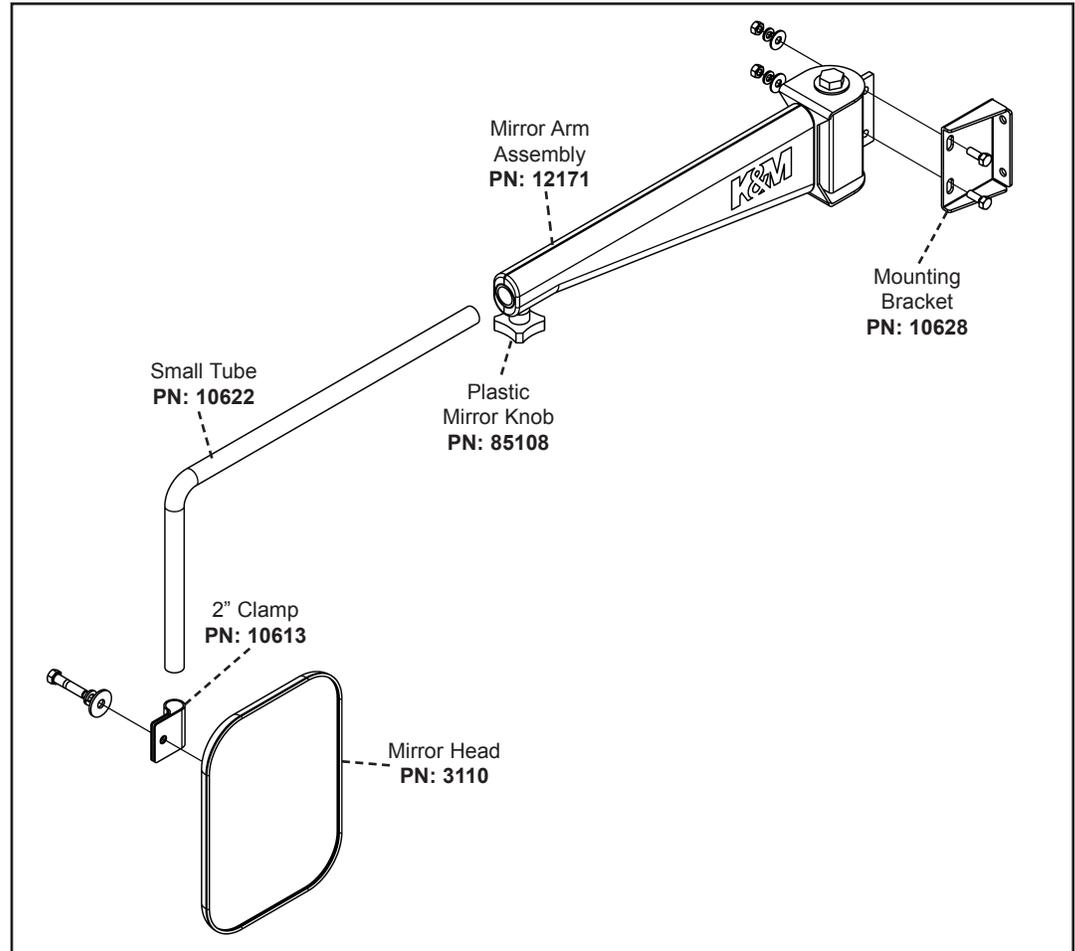

### Note!

*Do not overtighten the plastic mirror knob in step 3.*