


600 Uni Pro  
PN: 7616



SAP Magnum  
Air-Oil  
PN: 6102

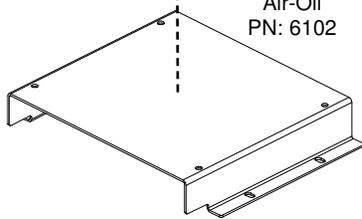

**Installation Instructions to Place a  
600 Uni Pro Seat Assembly in a  
7100 Series Magnum with an Original  
Air-Oil Suspension and Swivel**

1. Remove the original seat from the original swivel.
2. Bolt the seat assembly to the SAP Magnum Air-Oil plate using four 5/16" x 1" bolts and flange nuts.
3. Bolt the SAP Magnum Air-Oil plate and the seat assembly to the top plate of the original swivel. Use four 5/16" x 1" bolts and flange nuts.