


700 Uni Pro
PN: 7753



Note!

The slide rails need to be removed from the seat before installation.

SAP Magnum
Air-Oil
PN: 6102

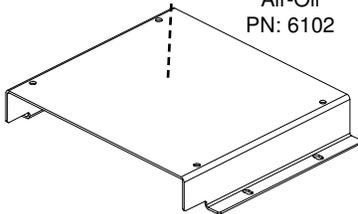

**Installation Instructions to Place a
700 Uni Pro Seat Assembly in a
7100 Series Magnum with an Original
Air-Oil Suspension and Swivel**

1. Remove the original seat from the original swivel.
2. Bolt the seat assembly to the SAP Magnum Air-Oil plate using four 5/16" x 1" bolts and flange nuts.
3. Bolt the SAP Magnum Air-Oil plate and the seat assembly to the top plate of the original swivel. Use four 5/16" x 1" bolts and flange nuts.



1. Pull the cushion forward as far as possible with the center lever. The seat must be in the forward most position.
2. On the right-hand side of the seat, directly under and to the inside of the front slide rail, there is a hole in the seat pan. Insert a Phillip screw driver in this hole and apply pressure. This will raise the retention clip which allows the cushion to slide forward and be removed from the seat.
3. To reinstall the cushion, align the white blocks with the cushion and slide towards the rear.