


KM 600
Uni Pro
PN: 7616

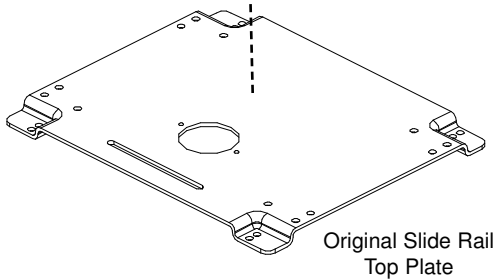

Original Slide Rail
Top Plate

**Installation Instructions to Place a
600 Uni Pro Seat Assembly in a
71, 72 or 89 Magnum Series
with an Original Air Suspension
without Swivel**

1. Remove the original seat from the slide rail top plate.
2. Place the seat assembly on the top plate of the slide rail assembly and mark the 12 7/8" x 9 7/8" hole pattern for drilling.
3. Drill the four 3/8" holes into the the slide rail plate.
4. Fasten the seat assembly to the plate using four 5/16" x 1" bolts and flange nuts.