


1060 Uni Pro Seat  
& Suspension  
PN: 8132




### Note!

Weight needs to be applied to the suspension to activate the pump.

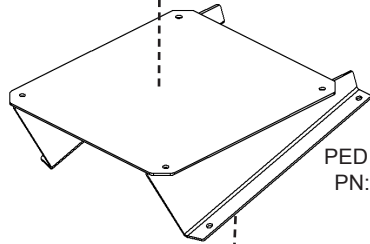

PED MF 11  
PN: 6062

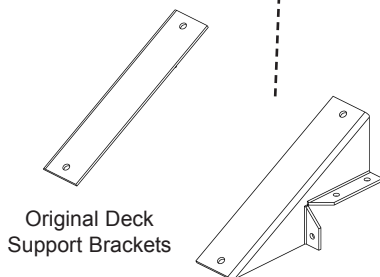

Original Deck  
Support Brackets

### Installation Instructions to Replace a Bostrom Forward Angled Suspension with a 1060 Uni Pro Seat and Suspension in Massey Ferguson Tractors

1. Remove the original seat and suspension from the tractor.
2. Bolt the PED MF 11 to the deck support brackets with four 5/16" x 1" bolts and flange nuts.
3. Bolt the suspension to the PED MF 11 with four 5/16" x 3/4" bolts and flange nuts.
4. Locate a power source and connect the suspension to power and ground. **(See note below.)**

### Note!

There are two wire connections in the 1060 Uni Pro, one for the Operator Presence Switch (OPS) and one for the compressor. The OPS wires come out of the back of the seat and the compressor wires are tucked in the boot. The OPS wires do not need to be connected for the seat to function. Connection of the OPS is only necessary if required by the machine or desired by the operator.