



1000/1003 Uni Pro Seat
& Air Suspension
PN: 8165 (1000 Uni Pro) or
PN: 8170 (1003 Uni Pro)

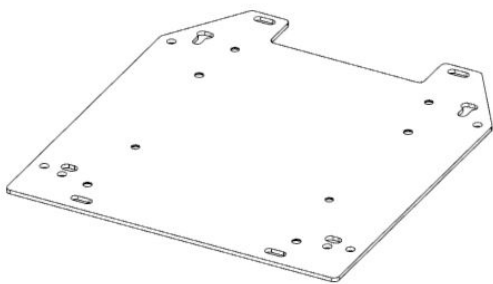

JD
PED
PN: 6077

Existing Tractor
Pedestal

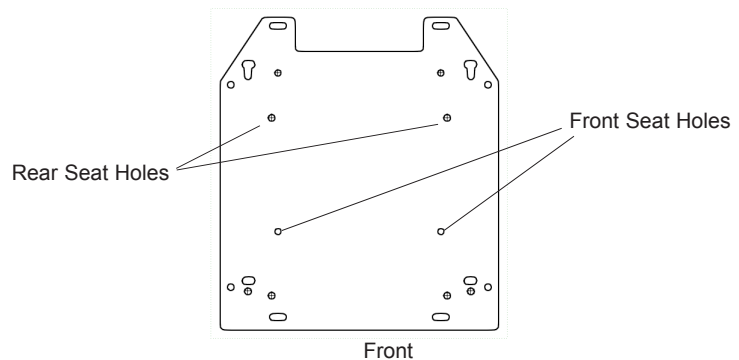

Installation Instructions to Place a 1000 or 1003 Uni Pro into a JD 8000/8010 Series Tractor

1. Remove the original seat and suspension. Keep the bolts used to mount the original seat.
2. Bolt the JD PN: 6077 to the bottom of the seat suspension using the 8mm x 20 mm flat head socket cap screws. See diagram below on which holes to use when bolting the plate to the seat.
3. Mount the JD Command Arm Bracket to the seat. Use the instructions provided in the box containing the JD Command Arm Bracket. This step can also be done when the seat is in the tractor.
4. Place the seat and suspension in the tractor and fasten to the original PED using the bolts saved in Step 1.
5. Mount the command arm to the command arm bracket.
6. Connect the wiring harness to the seat and suspension and then to the socket in the back of the cab where the original seat harness connected.