


1300 Uni Pro  
PN: 7945



JD 8000 Series  
PED  
PN: 6077

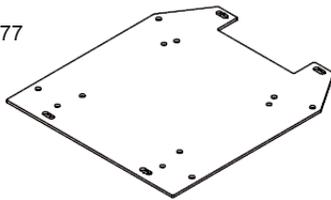

Existing Tractor  
Pedestal

### Installation Instructions to Place a 1300 Uni Pro into a John Deere 8000/8010 Series Tractor

1. Remove the original seat and suspension. Keep the original mounting bolts.
2. Bolt the JD 8000 Series PED to the tractor where the original seat was mounted using the original bolts.
3. Mount the JD Command Arm Bracket to the seat. Use the instructions provided in the box containing the JD Command Arm Bracket. This step can also be done when the seat is in the tractor.
4. Place the seat in the tractor and fasten to the JD 8000 Series PED using the 5/16" x 1" bolts and flange nuts.
6. Mount the command arm to the command arm bracket.
4. Connect the electrical connections from the seat to the tractor. It may be necessary to contact your local JD dealer for the tractor wiring in order to connect the seat to the tractor. There is a wiring diagram in the back pocket of the seat.