



441 Uni Pro  
Black Vinyl  
PN: 8021




440 Uni Pro  
Black Fabric  
PN: 8014

KM MSG83  
Mechanical  
Suspension  
PN: 8079



**Note!**  
Weight needs to be applied to the suspension to turn the mechanical knobs.

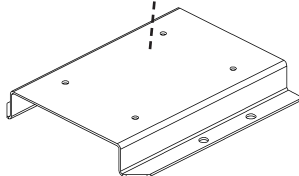

PED IH #06-66P  
PN: 6073

### Installation Instructions to Place a 440 or 441 Uni Pro and a Mechanical Suspension in IH 06, 26, 56 and 66 Series Tractors (Excludes 656/666 Series)

1. Remove the original seat and suspension mechanisms.
2. Slide the bottom half of the slide rails off of the new 441 Uni Pro seat. Mount the lower half of the the slide rails to the top of the suspension using the 8mm x 12mm socket head cap screws. NOTE: If the slide rails have studs in the bottom half they will need to be pounded out.
3. Loosen the bolts holding the top half of the slide rails on the seat. Adjust them to align with the lower half of the rails on the suspension and re-tighten.
4. Bolt the suspension to the pedestal with four 5/16" x 5/8" bolts and flange nuts.
5. Bolt the suspension and pedestal assembly to the tractor casting with the original bolts.
6. Slide the rail and seat assembly on to the suspension.