


Installation Guide

CIH Maxxum Mirror - Left Side (PN: 3133)

Fits: CIH Maxxum 5100-5200 Series

- 1. Place the mirror mounting bracket Mounting Backup against the side panel Bracket °00 Plate PN: 11514 of the roof assembly 30₀₀ with the lip of the Ø Mirror Arm Assembly mounting bracket in PN: 12171 the rain gutter. Align the front edge of the lip to the cab corner post. ଭ 2. Drill two 1/4" holes and Small Tube fasten the mounting PN: 10622 bracket to the roof **Drill and fasten** side panel with two to side panel of Plastic roof assembly. 1/4" x 3/4" bolts, lock Mirror Knob washers and the PN: 85108 backup plate. NOTE: The backup 2" Clamp PN: 10613 plate is installed on the inside of the roof side panel. 3. Drill two 1/8" holes Mirror Head at the rear of the PN: 3110 mounting bracket and fasten using two #8 x 1/2" self-tapping screws.
- 4. Fasten the **mirror arm assembly** to the **mounting bracket** with two 5/16" x 1" full thread bolts, flat washers, lock washers and nuts.
- 5. Insert the small tube into the mirror arm assembly and secure with the plastic mirror knob.



6. Fasten the mirror head to the small pipe with the 2" clamp and included hardware.



Installation Guide


CIH Maxxum Mirror - Right Side (PN: 3134)

Fits: CIH Maxxum 5100-5200 Series


- Place the mirror mounting bracket against the side panel of the roof assembly with the lip of the mounting bracket in the rain gutter. Align the front edge of the lip to the cab corner post.
- Drill two 1/4" holes and fasten the mounting bracket using two 1/4" x 3/4" bolts, lock washers and the backup plate.

NOTE: The **backup plate** is installed on the inside of the roof side panel.

 Drill two 1/4" holes at the rear of the mounting bracket and fasten using two #8 x 1/2" self-tapping screws.

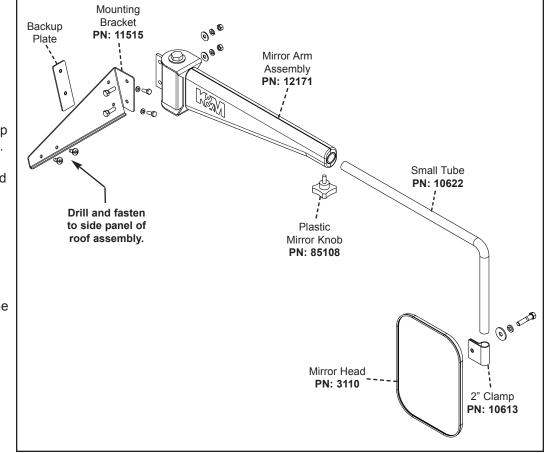

- 4. Fasten the **mirror arm assembly** to the **mounting bracket** with two 5/16" x 1" full thread bolts, flat washers, lock washers and nuts.
- 5. Insert the small tube into the mirror arm assembly and secure with the plastic mirror knob.



6. Fasten the **mirror head** to the **small pipe** with the **2**" **clamp** and included hardware.