

IH 86-88 Series Quick Fit

Lower Cab Kits



CHOOSE FROM

- | | | | | | | | | |
|---|----|---|----|--|----|---|----|--|
| 
Lower Cab Kit
(Black 64 HPSI Vinyl)
PNs: 4263 (86 Series)
or 4268 (88 Series) | OR | 
Lower Cab Kit
(Black Basketweave Vinyl)
PNs: 4266 (88 Series) | OR | 
Lower Cab Kit
(Burgundy Vinyl)
PNs: 4264 (86 Series)
or 4267 (88 Series) | OR | 
Lower Cab Kit
(Original Western
Brown Vinyl)
PNs: 4262 (86 Series)
or 4265 (88 Series) | OR | 
Headliner
Black Vinyl
PN: 4608 |
|---|----|---|----|--|----|---|----|--|

PN: 4263



PN: 4264

PN: 4262




IH 86 Series Quick Fit Lower Cab Kits

PNs: 4263, 4264 & 4262

QUICK FIT CAB KITS OFFER QUICK INSTALLATION

The IH 86-88 Series Quick Fit Headliner and Lower Cab Kits give you the quickest solution when replacing cab interior. Quick Fit cab kits are faster & easier to install, wrinkle-free, do not require messy glue cans for adhesive, and can be easily removed and repositioned without ruining upholstery. Easily snap these pre-formed pieces into place to make your tractor cab look like new.

PN: 4268

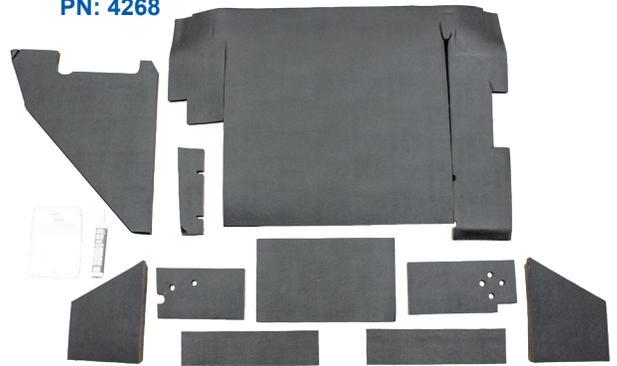

PN: 4266

PN: 4267

PN: 4265



IH 88 Series Quick Fit Lower Cab Kits

PNs: 4268, 4266, 4267 & 4265

APPLICATIONS



Tractors

- PNs: 4263, 4264 & 4262 Fit - International Harvester®:
 86 Series: 786, 886, 986, 1086, 1486, 1586, 186 Hydro;
 30 2+2 Series: 3388, 3588, 3788
- PNs: 4268, 4266, 4267 & 4265 Fit - International Harvester®:
 88 Series: 3088, 3288, 3488, 3688, 5088, 5288, 5488;
 60 2+2 Series: 6388, 6588, 6788

- Pre-formed pieces with plastic backing and vinyl covering
- Kits are wrinkle-free and repositionable for an almost effortless installation
- Easily snap pieces into place
- Include silicone sealant and instructions



IH 86-88 Series Quick Fit Headliner

PN: 4608



TRACTORSFATS.com

800-328-1752

308 NW 2nd Street • Renville, MN 56284

