


# JD 6000 Series

Plastic Cab Kits



**JD 6000-6010 Series  
Fender Panel - LH  
(Tan Vinyl)  
PN: 4284**

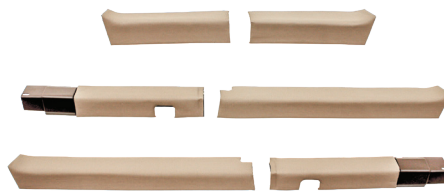

**JD 6000 Series  
Corner Post Kit  
PN: 4604**



**JD 6000 Series Kit -  
Early (BSN 131952)  
PN: 4605**



**JD 6000-6010 Series  
Fender Panel - LH  
(Multi-Brown Vinyl)  
PN: 4242**



**JD 6000 Series Kit -  
Mid (S/N 131952-146608)  
PN: 4606**



**JD 6000 Series Kit -  
Late (ASN 146608)  
PN: 4607**

See **REVERSE**  
for applications  
and features.



## Standard Applications

Tractor Make/Model	Features	K&M Part Number
<b>John Deere 6000-6010 Series Tractors</b> <b>6000 Series:</b> 6100, 6200, 6300, 6400, 6500; <b>6010 Series:</b> 6110, 6210, 6310, 6410, 6510	<ul style="list-style-type: none"> <li>• Custom fit thermoformed black plastic panel                         <ul style="list-style-type: none"> <li>• Pre-formed left-hand fender panel</li> <li>• 1/4" thick foam with vinyl cover</li> </ul> </li> <li>• Fastens to tractor using existing hardware</li> <li>• Velcro adhesive included for installation</li> </ul>	<i>JD 6000-6010 Series Fender Panels - LH (Tan Vinyl)</i> <b>PN: 4284</b> <i>(Multi-Brown Vinyl)</i> <b>PN: 4242</b>
<b>John Deere 6000 Series Tractors</b> <b>6000 Series:</b> 6100, 6200, 6300, 6400, 6500	<ul style="list-style-type: none"> <li>• Custom fit pre-cut pieces for easy installation</li> <li>• Contains 6 thermoformed plastic backed pieces                         <ul style="list-style-type: none"> <li>• 1/4" thick foam with vinyl cover</li> </ul> </li> <li>• Install with original trim and fasteners</li> </ul>	<i>JD 6000 Series Corner Post Kit</i> <b>PN: 4604</b>
<b>John Deere 6000 Series Tractors (BSN 131952)</b> <b>6000 Series (BSN 131952):</b> 6100, 6200, 6300, 6400, 6500	<ul style="list-style-type: none"> <li>• Custom fit pre-cut pieces for easy installation</li> <li>• Contains 7 thermoformed plastic backed pieces                         <ul style="list-style-type: none"> <li>• 1/4" thick foam with vinyl cover</li> </ul> </li> <li>• Includes fasteners but install with original trim</li> </ul>	<i>JD 6000 Series Kit - Early (BSN 131952)</i> <b>PN: 4605</b>
<b>John Deere 6000 Series Tractors (S/N 131952-146608)</b> <b>6000 Series (S/N 131952-146608):</b> 6100, 6200, 6300, 6400, 6500	<ul style="list-style-type: none"> <li>• Custom fit pre-cut pieces for easy installation</li> <li>• Contains 7 thermoformed plastic backed pieces                         <ul style="list-style-type: none"> <li>• 1/4" thick foam with vinyl cover</li> </ul> </li> <li>• Includes fasteners but install with original trim</li> </ul>	<i>JD 6000 Series Kit - Mid (S/N 131952-146608)</i> <b>PN: 4606</b>
<b>John Deere 6000 Series Tractors (ASN 146608)</b> <b>6000 Series (ASN 146608):</b> 6100, 6200, 6300, 6400, 6500	<ul style="list-style-type: none"> <li>• Custom fit pre-cut pieces for easy installation</li> <li>• Contains 5 thermoformed plastic backed pieces                         <ul style="list-style-type: none"> <li>• 1/4" thick foam with vinyl cover</li> </ul> </li> <li>• Includes fasteners but install with original trim</li> </ul>	<i>JD 6000 Series Kit - Late (ASN 146608)</i> <b>PN: 4607</b>