


IH 06-66 Hiniker Step & Handrail (PN: Step-3303 / Handrail-3341)

1. Remove the original step from the tractor.
2. Attach the step **mounting bracket** to the mounting surface of the original step and secure with two 3/8" x 1 1/4" capscrews, lock washers and nuts; and two 1/2" x 2" capscrews, lock washers and nuts.
3. Insert the **pivot arm** of the **top step section** into the **mounting bracket** and fasten with two 5/8" x 4" capscrews, lock washers and nuts.
4. Rotate the step to the desired position and tighten all bolts securely.
5. Slide the **bottom step section** along the outside of the **top step section** to the desired height and fasten with two 3/8" x 3/4" carriage bolts, lock washers and nuts in the rear holes.
6. Place the handrail into position on the front side of the step and fasten it, along with the step sections, using two 3/8" x 1" carriage bolts, lock washers and nuts.

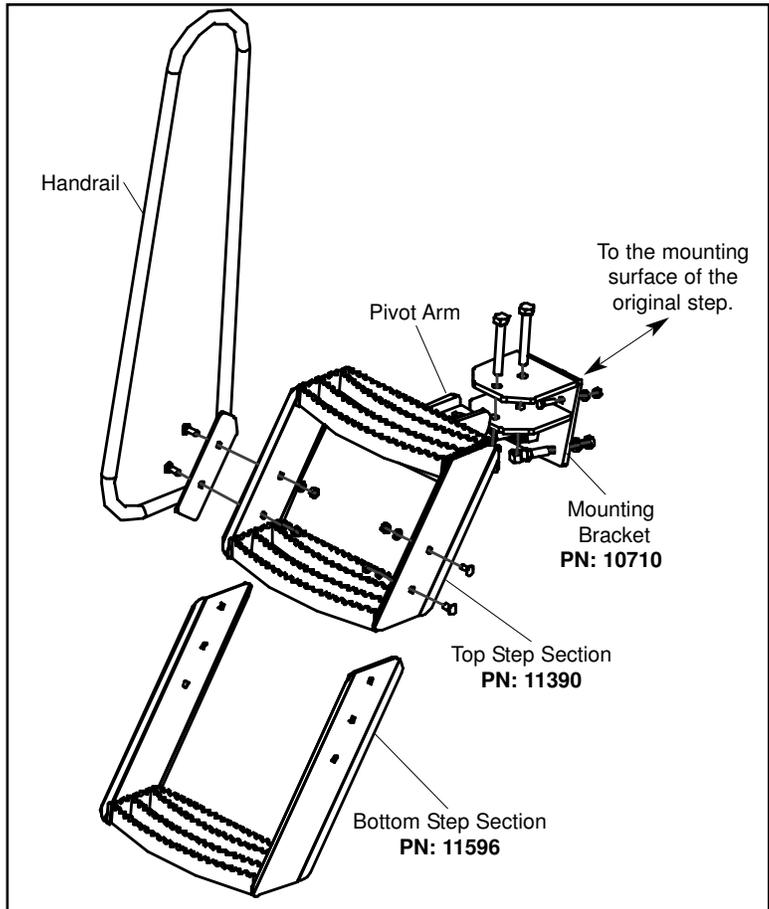

Note!

The handrail is also fastened to the two front holes of the step.