


Instruction Guide

KM 115-116 Uni Pro Safety Switch (PN:7746)



- Attach the Safety Switch to the Attachment Plate as shown in Figure A. Use two 3/16" x 1/2" cut screws.
- Place a flat washer, spring and another flat washer onto the 5/16" bolts as shown in Figure B.
- 3. Place one bolt, spring and washers into one of the two square holes on the bottom of the seat as shown in **Figure C**.
- 4. Bolt the attachment plate to the bottom of the seat with a 5/16" center lock nut, as shown in **Figure D**.
- 5. Repeat steps 3 and 4 for the other side of the attachment plate.
- 6. Tighten the lock nuts so they are flush with the end of the bolts as shown in **Figure E**.
- 7. Attach seat and attach wires to the safety switch.

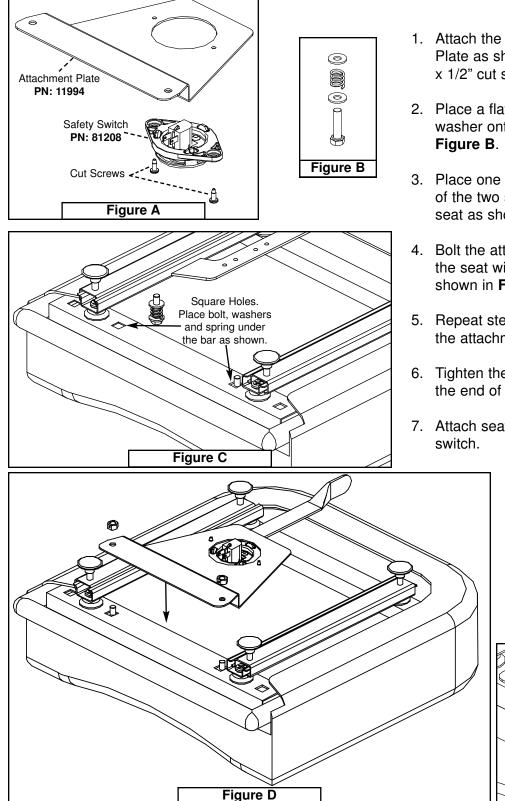