



Installation Guide

JD 7R-8R/RT/RX-9R/RT/RX Monitor Bracket (PN: 2667)

- 1. Remove the two plastic caps from the rear right post and the two plastic caps from the front right post to expose the mounting holes.
- 2. Mount the Rear Mount Bracket in the cab to the rear right post using two 10mm x 20mm Bolt. Hand tighten only.
- 3. Mount the Front Mount Bracket in the cab to the front right post using two 10mm x 20mm Bolt. Hand tighten only.

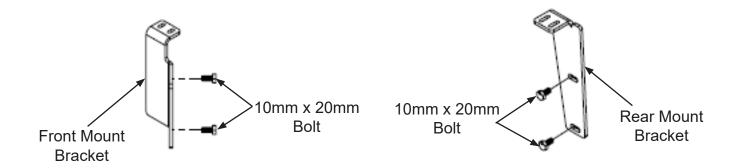

4. Fasten the Front Main Bar, Add Bar, and Rear Main Bar together using two 1/4" x 1" carriage bolts, two 1/4" x 1.25" carriage bolts, and four nuts. Hand tighten only.

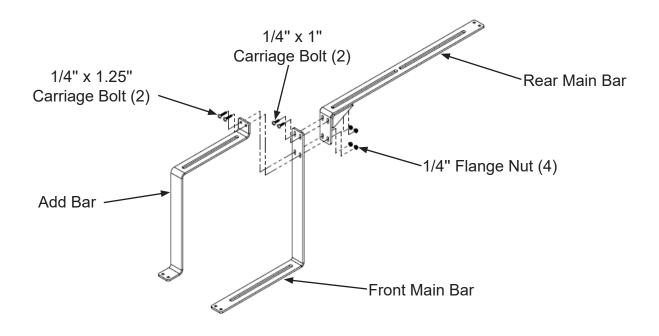

Technical Support


Phone: 1.800.328.1752 / Website: www.tractorseats.com




Installation Guide

JD 7R-8R/RT/RX-9R/RT/RX Monitor Bracket (PN: 2667)

5. Place the monitor bracket into the cab and secure in place using two 1/4" x 1" carriage bolts and flange nuts in the rear and two 1/4" x 1.25" carriage bolts and flange nuts in the front.

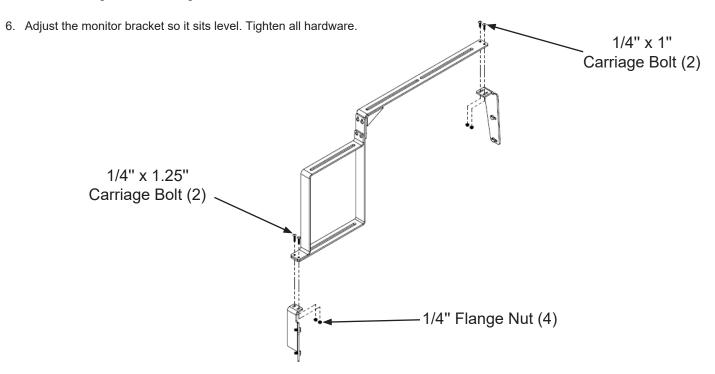

7. Place the tray in the desired location and fasten using two 1/2" x 1" carriage bolts and two flange nuts.

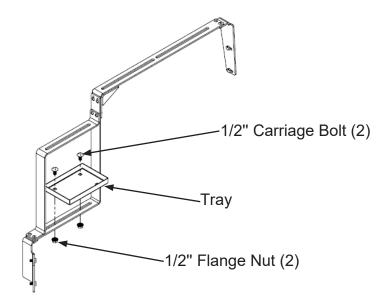

Technical Support

Phone: 1.800.328.1752 / Website: www.tractorseats.com